



X9 SERIES

USER MANUAL

BATCADDY
ELECTRIC GOLF CADDY®



X9R
X9R Carbon

ATTENTION: Please follow all assembly instructions. READ the instructions carefully to understand the operating procedures BEFORE you operate your caddy.

TABLE OF CONTENTS

Packing List.....3

Optional Accessories.....3

Overview.....4

Wheel Mounting.....5

Opening Your Caddy.....5

Battery & Charger.....6

Handle Control.....7

Remote Control.....8

Scorecard Holder.....9, 10

Umbrella Holder.....11

Anti-Tip Wheel.....11

Tracking Adjustment.....12

BATCADDY Remote Caddy Comparison.....14

Model Weights and Measurements.....15

Customer Service and Technical Support.....16

PACKING LIST

- 1 - X9 Series frame pre-assembled incl. front wheel
- 2 - Rear wheels
- 1 - Advanced Lithium-FePO4 battery
- 1 - Battery Charger with power cable
- 1 - Instruction manual
- 1 - Battery Use Instructions
- 1 - Seat Installation instructions
- 1 - Remote Control Handset

Included Accessories

- Umbrella Holder
- Scorecard Holder
- Cup Holder

OVERVIEW

X9 Series



WHEEL MOUNTING

When attaching the two rear wheels, match the tread direction to the front tire. Press the small silver buttons with your index and middle fingers. Slide the wheel onto the axle and turn the wheel until it snaps into place against the interior sprocket. The first of the two notches is for the freewheel mode (small gap between axle and wheel).

To release the wheel, press the silver buttons and pull the wheel off the axle.



Wheel & axle with small, silver buttons

OPENING YOUR CADDY.

Open the Lower Arm Assembly to a vertical position - Tighten the Lower Screw Assembly until tight.

Please note that the screw can be screwed into the thread without much effort. If it gets stuck, loosen and try to re-tighten carefully! Never over-tighten or force the screw, damage can occur.

Next, raise the Upper Handle Assembly to desired height. Tighten the Upper Screw Assembly to lock in the handle.

Reverse the process to fold your Batcaddy

Important: The screws must tighten easily! Never tighten with excessive force, damage can occur.



Figure 3: Golf ball screw above & below

BATTERY & CHARGER

Before the first start-up, you should first fully charge the battery with the supplied charger. The battery is fully charged when the LED is green. The battery is sufficient for up to 36 holes – depending on the duration of the game and the playing conditions. A complete charging cycle takes about 3 hours.



Figure 4: Battery and Charger

Place the battery in the tub provided. Please only use the original supplied BATCADDY battery. Connect the battery plug to the battery socket.



Figure 5: Battery plug

HANDLE CONTROL

Press the start/stop button for about 2 seconds to turn on the caddy. The battery level indicator will now start to light up.

As soon as the battery charge level indicator only lights up red (about 25%), we recommend recharging the battery.

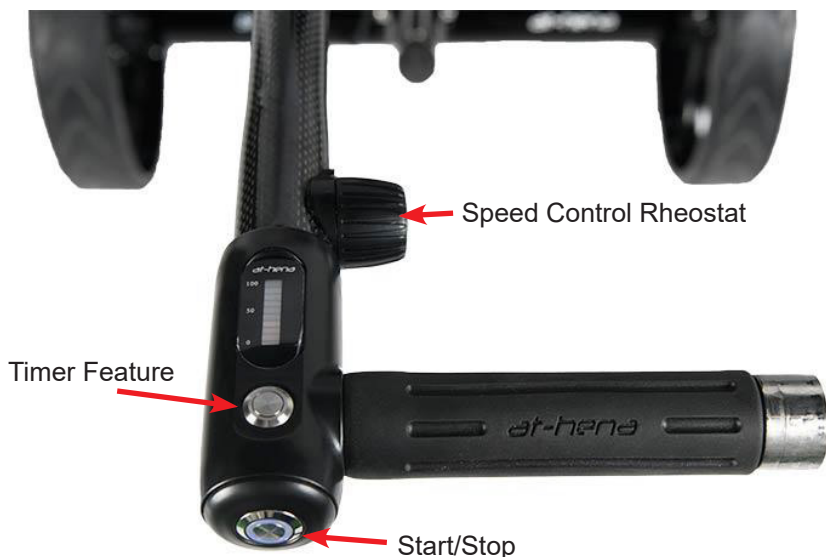


Fig. 6: Control Element

With the speed wheel you can adjust the BATCADDY X9R to the desired speed. To do this, simply turn the wheel forward or back with your index finger.

With a short press of the start/stop button, you can stop the Caddy without it switching off completely. If you press this button again, the Caddy will continue to drive automatically at the last set speed.

With the Timer button, you can let the Caddy drive ahead at a fixed speed to a fixed distance. (1x press about 10 yards, 2x press about 20 yards, 3x press about 30 yards)


USB CONNECTION

With the USB port, personal belongings, such as GPS golf watches or smartphones, Bluetooth speakers, etc. can be charged. The range of the battery will slightly shortened.



Remote Control Operation

1. **POWER Switch:** Slide up to turn on the Remote Control. Slide down to turn off. It is recommended to turn the Remote Control off when not actively operating your Caddy. This will avoid accidental button pushes when not paying attention to your Caddy.
2. **LED Light:** Lights up when Remote Control is turned on and a button is pushed. This indicates that the remote is sending a signal to the Caddy.
3. **STOPPING:** The button will stop the Caddy
4. **GOING FORWARD:** Pressing the **UP BUTTON** while the Caddy is standing still will start the Caddy in forward motion. Pushing the **UP BUTTON** again will increase the Caddy's forward speed one level. Your Caddy has 9 forward speeds. Pushing the **DOWN BUTTON** will lower the forward speed one level.
3. **GOING BACKWARD:** Pressing the **DOWN BUTTON** while the Caddy is standing still will start the Caddy in reverse motion. Pushing the **DOWN BUTTON** again will increase the Caddy's reverse speed one level. Your Caddy has 9 reverse speeds. Pushing the **UP BUTTON** will lower the reverse speed one level.
4. **TURNING RIGHT:** Press and hold the **RIGHT BUTTON** and the Caddy will turn to the right (from a stop and while in motion) until the button is released.
5. **TURNING LEFT:** Press and hold the **LEFT BUTTON** and the Caddy will turn to the left (from a stop and while in motion) until the button is released.

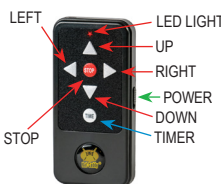

SCORECARD HOLDER

Step 1: Remove the scorecard holder from the box and remove the bubble wrap.




Step 2: Open the lid and loosen the two black cross screws completely.



Step 3: Remove the curved bottom of the mounting device.



Step 4: Place the scorecard holder on the upper bars about 2 finger widths away from the speed wheel.

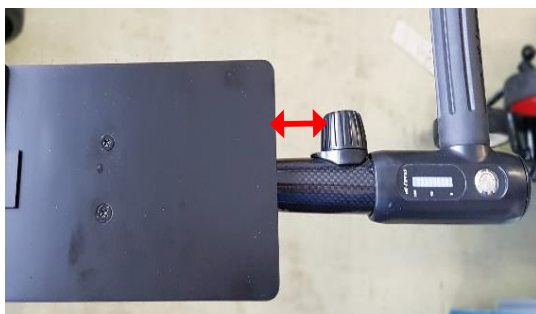

SCORECARD HOLDER (Continued)

Step 5: Position the bottom of the mounting device on the bottom of the top handle, then you can easily tighten the screws.



Step 6: Use the palm of your hand to push the bottom up so that the screws protrude over the scorecard holder.



Step 7: Now you can tighten the two cross screws completely. Make sure that the scorecard holder is aligned horizontally.



UMBRELLA HOLDER

Turn the screen holder clockwise into the thread of the pre-assembled clamp next to the handle. For optimal grip, rotate the umbrella holder as far as possible clockwise. To release the tension and move the umbrella holder, rotate counterclockwise.



AUXILIARY WHEEL

Remove the quick-release bolt from the Anti-Tip Wheel and slide the Anti-tip wheel in the rear of the device. Subsequently, the Anti-Tip Wheel is connected with the Quick Release bolt again.



ADJUSTING THE TRACKING OF YOUR BATCADDY

The caddy is designed to be used with cart bags. Stand bags should not be used.

Please make sure that the weight distribution of the cart golf bag on the right and left side is approximately the same. If this is the case, you can loosen the silver nuts a little on the front wheel on both sides. After that, the small black nuts can be easily tightened or loosened to adjust the axle forwards or back, realigning the front wheel. Re-tighten the silver nuts.





MODEL COMPARISON

FEATURES	X3 Sport	X4 Sport	X3R	X4R	X8R	X9R X9R Carbon
One-Click Locking Frame	✓		✓			
Dual-Lock Z-Fold Frame		✓		✓		
No-Lock Euro-Wave Frame					✓	
Stealth Design Frame						✓
Advanced Stability Geometry						✓
“Forever Traed” Wheels						✓
Single 12V Motor	✓	✓				
Dual 12V Motors			✓	✓	✓	
Dual 24V Motors						✓
Single Handle Operation	✓	✓	✓	✓	✓	
Upgraded Handle Electronics						✓
Speed Recall Cruise Control	✓	✓	✓	✓	✓	✓
Fully Directional Remote Control			✓	✓	✓	✓
Standard Battery Level Indicator	✓	✓	✓	✓	✓	
Upgraded Battery Level Indicator						✓
USB Charging Port	✓	✓	✓	✓	✓	✓
Single Anti-Tip Whee (Upgradeable to “Mountain Slayer”)			✓	✓		
Dual Anti-Tip Wheel (“Mountain Slayer”)					✓	
Low Profile High Performance Dual Anti-Tip Wheel						✓
Power-Off Freewheel	✓	✓	✓	✓		
True Freewheel Mode					✓	✓
Auto-Timed Distance Control	✓	✓	✓	✓	✓	✓
Downhill Speed Control			✓	✓	✓	✓
Electronic Parking Brake						✓
Caddy Seat	Optional	Optional	Optional	Optional	Optional	Optional
Standard Accessory Package	✓	✓	✓	✓	✓	
Upgraded Accessory Package						✓

BATCADDY WEIGHTS & MEASUREMENTS

	X3 Sport	X4 Sport	X3R	X4R	X8R	X9R X9R Carbon
Open Dimensions	Length: 42.0" Width: 22.3" Height: 39.8"	Length: 45.0" Width: 23.5" *Height: 36-44"	Length: 42.0" Width: 25.5" Height: 37.5"	Length: 45.0" Width: 23.5" *Height: 36-44"	Length: 45.0" Width: 23.5" *Height: 36-44"	Length: 44.0" Width: 26.0" *Height: 36-46"
Folded Dimensions	Length: 30.0" Width: 22.3" Height: 15.3"	Length: 33.0" Width: 23.5" Height: 13.0"	Length: 37.0" Width: 25.5" Height: 13.5"	Length: 38.0" Width: 23.5" Height: 14.0"	Length: 36.0" Width: 23.5" Height: 13.0"	Length: 35.0" Width: 26.0" Height: 12.5"
Shipping Box Measurements	Length: 36.0" Width: 21.0" Height: 13.0"	Length: 33.0" Width: 24.0" Height: 11.0"	Length: 34.0" Width: 24.0" Height: 14.0"	Length: 38.0" Width: 23.5" Height: 14.0"	Length: 36.0" Width: 23.5" Height: 13.0"	Length: 30.0" Width: 26.0" Height: 13.0"
Weight (Excluding Battery & Accessories)	19.0 LBS	20.0 LBS	22.4 LBS	23.3 LBS	25.1 LBS	19.0 LBS

*Open height varies due to adjustable handle on X4, X8, X9 Series Carts

CUSTOMER SERVICE AND TECHNICAL SUPPORT

Call/text us at (888) 229-5218
or email us at support@batcaddy.com



BATCADDY
ELECTRIC GOLF CADDY™

BC-091223